
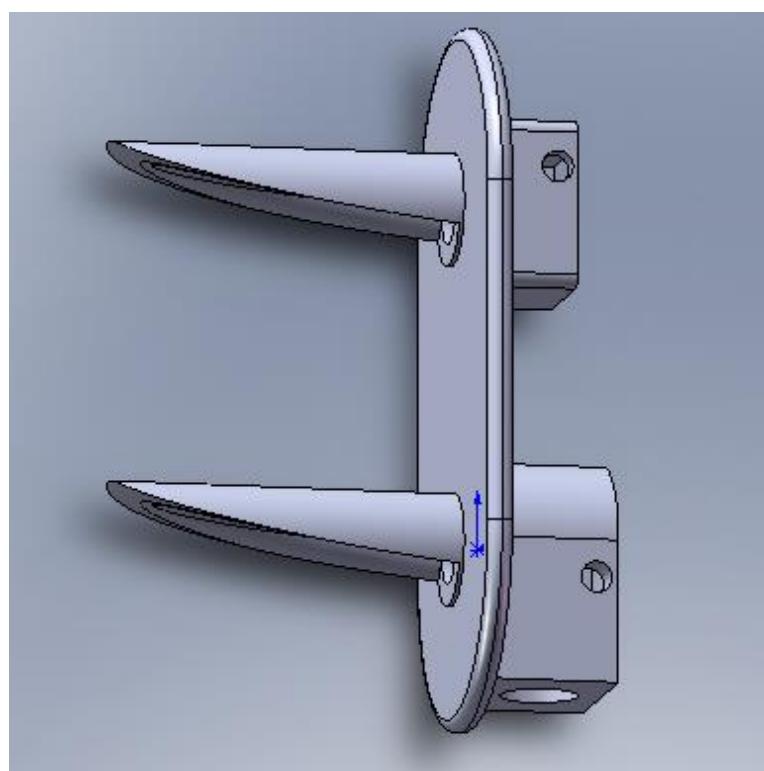


# Signalist Signal Head

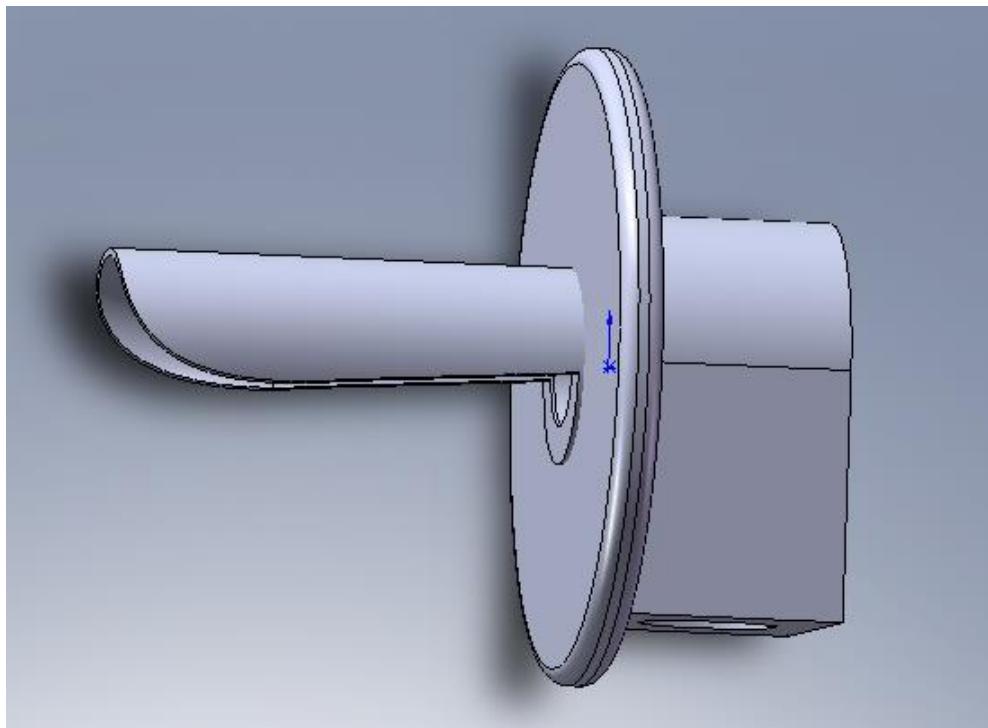

LED signal head manual

## **Overview**

The Signalist signal heads are available in various styles of searchlight signal optimised for use with the Signalist SC1 signal decoder. Those that are fitted with a LED have either a common anode PLCC4 RGB LED which incorporates red, green and blue whose colours can be mixed to make almost any visible colour, or in the case of SHxa models RGY with red, green, and yellow LEDs, or can be fitted on request with single colour red or white LEDs. Westinghouse 4-aspect heads have an additional yellow LED in the top lamp housing connected in place of the blue LED in the lower lamp housing. Dwarf heads are not fitted with LEDs but LEDs of the desired colours can be simply inserted from the rear.

No current limit resistors are fitted so if using another make of signal decoder you may have to fit current limiting resistors externally.

## **Connection**

The Signalist signal heads will typically have four wires. The yellow wire is the common anode, with the red, green and blue (or yellow) LEDs connected to their respectively coloured wires. The Westinghouse 4-aspect head has the second yellow LED connected to the blue wire. Westinghouse heads can be supplied with RGB LEDs in both lamp housings if required to make colour matching easier where each lamp will have its own set of four wires.

## **Mounting**

Signalist signal heads have a 2.5mm diameter hole in the base of the lamp housing which can be fitted on top of a piece of 2.5mm diameter tube. The heads sit nicely on the top of Taintech non-operation signal mast kits or can be fitted to gantries.

## **Support**

If you need any support on things covered in this manual or for things that have not been covered interactive support is available on the Signalist web site where you will find a link to the Signalist support forum:-

<http://signalist.co.uk/>

Signalist signal head manual Rev 2

© Paul Harman 2017 all rights reserved